



# BD Rowa™ Vmax

Refrigerated unit

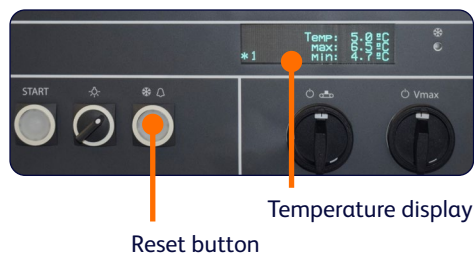

## Machine parts

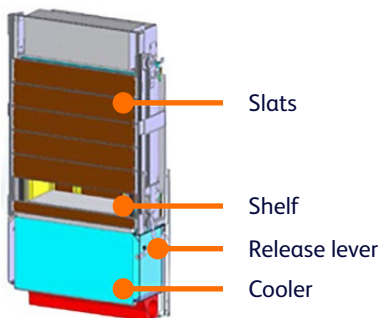


Want to learn more?  
Visit the BD Rowa™ Customer Learning Center at <https://clc.rowa.de>.

## General usage

- Input and output as usual.
  - Articles need to be configured as refrigerated in the pharmacy IT system.
  - Refrigerated articles are highlighted in turquoise in the [Article Overview](#).
- Use the [reset button](#) to confirm an acoustic alarm and to reset the minimum and maximum temperature.

## Manual output of packages

- The manual operation handles are placed in a holder above the input belt.
- Use one of the handles to move the release lever upwards and slightly to left until the resistance is overcome. The slats are now unlocked.
- Use two handles to open the slats:
  - Put the handles in the pinholes left and right.
  - Push up the slats, with light pressure on the handles.  
Move max. 3–4 slats at once - use more handles if necessary!
  - When the required position is reached, push the handles through into the provided holes.
- Take out the required packs with the removal aid.
- Carefully pull out the handles a little, so that the slat is no longer fixed in position. Slowly lower the slats back to the start position.
- Place the handles back in the holder above the input belt. If the handles are not in the holder, the machine will not be able to start!
- Confirm the manual output at the screen.

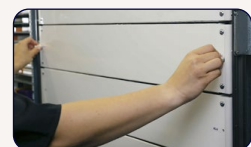

If you have any questions, please contact [BD Rowa™ Service](#).

This document does not replace the operating instructions. The contents of the operating instructions must be read carefully and followed!

[bd.com/rowa](https://bd.com/rowa)

BD, the BD Logo, Rowa and Vmax are trademarks of Becton, Dickinson and Company or its affiliates. All other trademarks are the property of their respective owners. © 2024 BD. All rights reserved. (Jan-2024 NPM-3313)

